

1D Laser Barcode Scanner User Manual



This manual is simplified ,for detailed manual information please download the completed user manual from our website or obtain it from our distributor.

Factory Default



Note:Default interface:USB-HID

Setting Procedure:
Scan required bar codes

Example: Factory default,USB-HID,add suffix "Enter"ect barcode as below

1 Factory Default



2 Enter



Interfaces



Scan Mode



Auto-Induction



Buzzer



Image Inverted



Keyboard Language



Suffix Setting



USB-COM、RS232 Baud Rate Setting



Shock Setting



Barcode Setting

